



OPERATION MANUAL

ILLUSTRATION

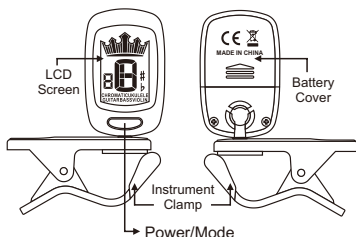

INSTALLATION OF THE BATTERY

 Battery Cover



1. Please open the battery cover , insert a CR2032 battery (attention "+" / "-" charges).
2. If the unit doesn't work , please take battery out and reinstall the battery.
3. When the screen become dark or tuning slowly , replace a new battery in time.
4. Please do not arbitrarily discard the waste battery.

OPERATION

1. Press the power button and hold on to turn on (off) the tuner.
2. Press the power button continuously to select turning item out of Chromatic, Guitar, Bass, Ukulele and Violin.
3. Clip on strongest vibrating part of your instrument.
4. When it is in tune, the backlit Turns GREEN. When it is Sharp or Flat, the backlit turns WHITE.
5. The unit will shut off automatically if there is no signal within 5 minutes.
6. the unit will self-motion memory last time your setting ,if reinstall the battery ,the unit automatic return to initial setting .

SPECIFICATIONS

- Tuning :** Chromatic, Guitar, Bass, Ukulele, Violin
- Tuning way :** Clip
- Tuning range :** A0(27.5Hz)~C8(4186Hz)
- Precision :** ± 1 cent
- Calibration :** A4=440Hz
- Power :** 3V ,Battery (CR2032) $\times 1$
- Dimension :** 69mm \times 48mm \times 24mm
- Weight :** 20g
- Accessories :** Operation manual, 1 piece battery (CR2032)