

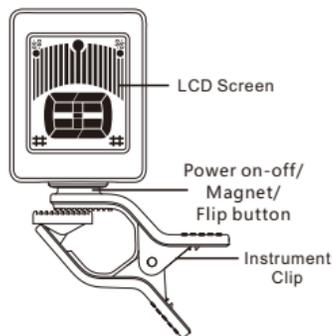


INSTRUCTIONS

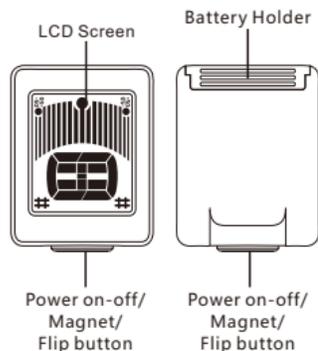

BATTERY INSTALLATION

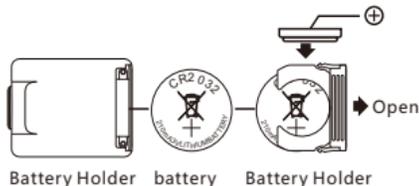

Slide the battery drawer out and insert a new CR2032 battery with the "+" sign facing up.

If the tuner does not respond, remove and reinstall the battery. When the screen starts to fade, it's time to replace the battery. Please dispose of used batteries responsibly.

SPECIFICATIONS

Tuning Modes: Chromatic
Tuning Range: A0(27.5Hz)~C8(4186Hz)
Accuracy : ± 1 cent
A Reference : 440Hz
Power : 3V CR2032 (included)
Weight : Tuner Without clip - .3oz
With clip - .7oz

OPERATION

1. Press the power button (magnet on bottom) until the tuner turns on or off. Without the clip, attach the tuner to the back of a machine head on the back of the guitar's headstock. (It can be attached to any ferrous metal part on any instrument.) Attach the tuner to the clip to use a normal "clip-on" tuner.
2. Play a note on a guitar or bass and your tuner will show the note name and string number. When a given note is in tune, the display will change color.
3. The display can be flipped, in order to make it easy to read in almost any position, by pressing the button (magnet) on the bottom of the tuner.
4. The tuner will automatically turn off if not used for 3 minutes.

A 7/16" (11mm) round self-adhesive metal disk is included with your tuner. This is to be used with nonferrous machine heads, acoustic guitar, violin tops, etc. Peel off the paper backing to attach. The adhesive will not damage your instrument.